


FOSTER

L.B.FOSTER COMPANY

4000
VIBRO DRIVER[®]/EXTRACTOR

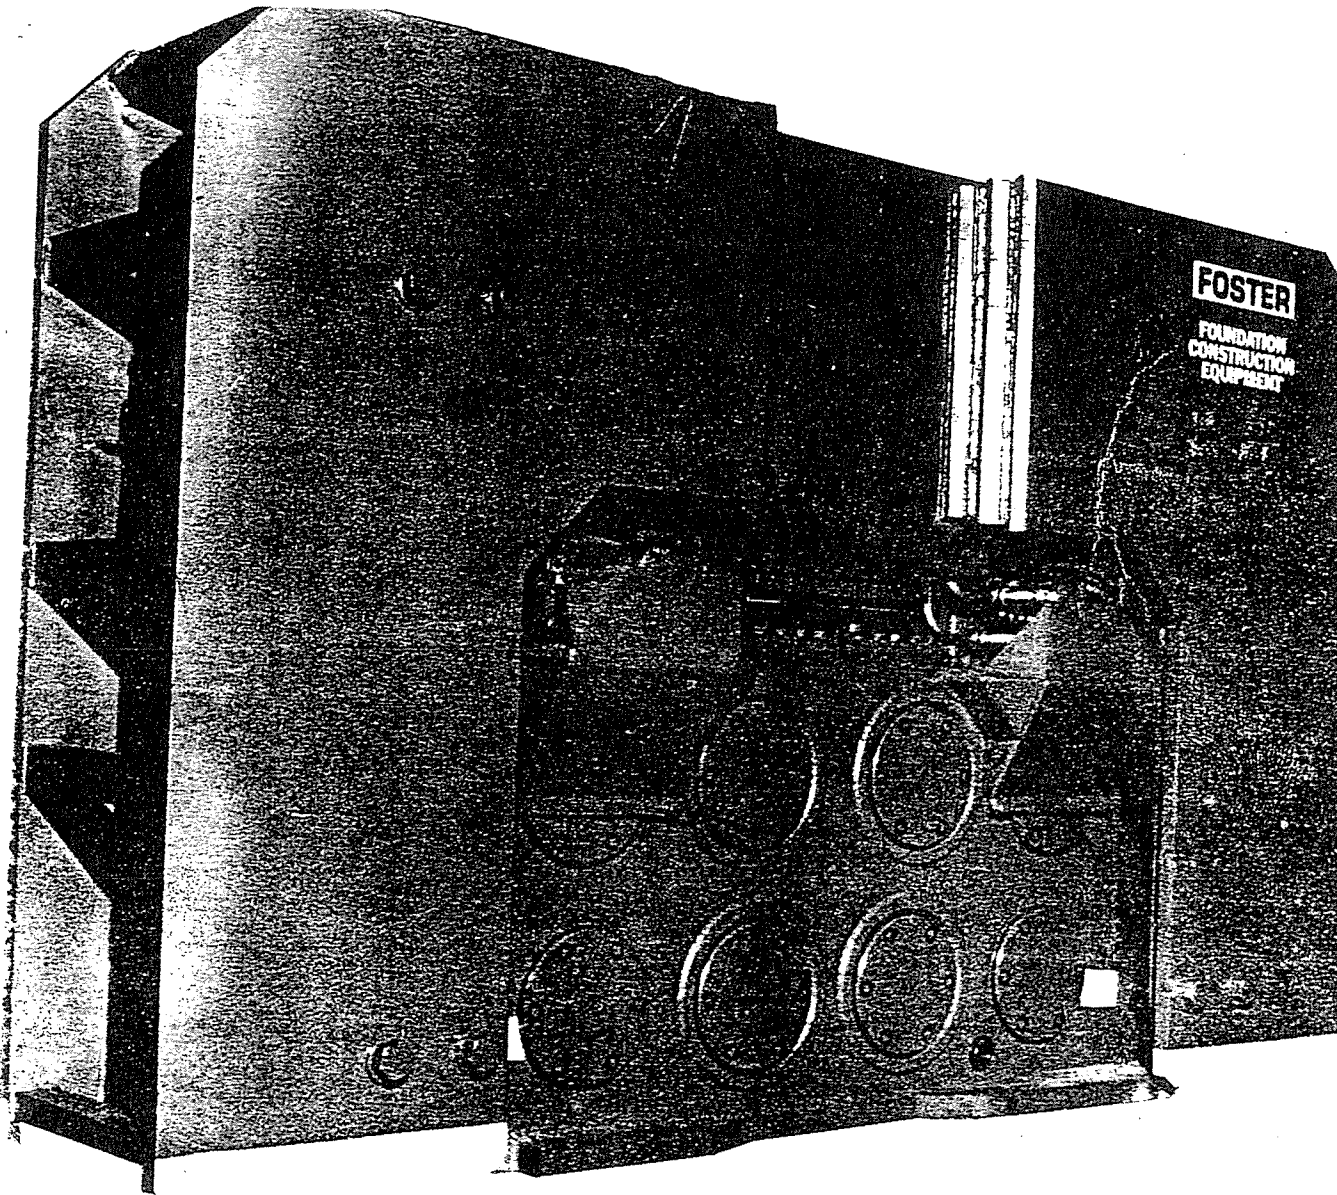

OPERATION/MAINTENANCE
MANUAL

L. B. FOSTER
4000
VIBRO DRIVER/EXTRACTOR
OPERATION AND MAINTENANCE MANUAL

INDEX

1).	<u>GENERAL DISCUSSION</u>	
	A). Vibro Driver Extractor	Page 1
	B). Hydraulic Power Pack	Page 1
	C). Driving/Extracting Heads	Page 2
	D). Remote Control Pendant	Page 2
	E). Specifications	Page 3
11).	<u>PREPARATION FOR OPERATION</u>	
	A). General	Page 4
	B). Safety Precautions	Page 4
	C). Rigging of Vibro Driver/Extractor	Page 5
	D). Connection of Driving/Extracting Head	Page 5
	E). Connection of Hydraulic Hoses	Page 5
	F). Final Check	Page 6
111).	<u>OPERATING INSTRUCTIONS</u>	
	A). Completion of Set-Up	Page 6
	B). Start and Warm Up of Engine	Page 6
	C). Warming of Hydraulic Fluid	Page 7
	D). Operating of Remote Control Pendant	Page 7
	E). Shutdown	Page 8
IV).	<u>MAINTENANCE</u>	
	A). General	Page 9
	B). Daily	Page 9
	C). 100 Hours	Page 10
	D). 1000 Hours	Page 11
	E). Severe Conditions	Page 11
	F). Lubrication	Page 11
V).	<u>HYDRAULIC CIRCUITRY</u>	
	A). Clamp	Page 13
	B). Motors	Page 14
	C). Hydraulic Schematic	Page 15
	D). Hydraulic Ledgent	Page 16
VI).	<u>ELECTRICAL SYSTEM</u>	
	A). Starting the Diesel Engine	Page 17
	B). Stopping the Diesel Engine	Page 18
	C). Closing the Hydraulic Clamp in the Driving/ Extracting Head	Page 18
	D). Opening the Hydraulic Clamp in the Driving/ Extracting Head	Page 18
	E). Starting the Vibrator	Page 19
	F). Stopping the Vibrator	Page 19
	G). Electrical Schematic Print	Page 20
VII).	<u>TROUBLE SHOOTING</u>	
	A). General	Page 21
	B). Difficulties	Page 21
	C). Trouble-Shooting Charts	Page 21
	D). Start-Up Chart	Page 22 - 38

INDEX (CONT'D)

V111). PARTS AND MANUALS

- A). G. E. Relay
- B). Murphy Switch Gages
- C). Agastat Time Delay Relay
- D). Filters
- E). Rivett Pump
- F). Honeywell Electrohydraulic Controller
- G). Rexroth Clamp, Check, and Relief Valves
- H). Sundstrand Pump
- I). Allis Chalmers Engine